

Features


- ✓ Practical high-performance radioisotope identifier
- ✓ Compact and portable
- ✓ 3rd-party test results for ANSI N42.34 and DND0 TCS standards available by request
- ✓ Option for $\leq 0.8\%$ FWHM energy resolution at 662 keV and interaction-by-interaction resolution of $\leq 0.65\%$ FWHM
- ✓ Real-time 360° isotope-specific directionality
- ✓ Ready to use in less than 60 s
- ✓ Industry-leading efficiency with over 19 cm³ pixelated CZT
- ✓ No cryogenic cooling required
- ✓ Energy range covers isotopes of interest up to 3 MeV
- ✓ Real-time isotope detection and identification
- ✓ Embedded user interface with one-handed operation
- ✓ MFK/ATAK CBRN plugin compatible
- ✓ Software updates included
- ✓ Wireless connectivity option
- ✓ Network webpage interface for mobile devices

H3D[®]'s Next Generation A-Series is the new standard in radioisotope identification devices (RIIDs). Designed to meet your needs, experience:

- High energy resolution
- High efficiency
- Directionality
- Compact and ergonomic design

The most advanced semiconductor technology available to achieve spectroscopic performance competitive with cryogenically cooled detectors for:

- Border security
- First responders
- Military and defense
- Environmental radiation measurements

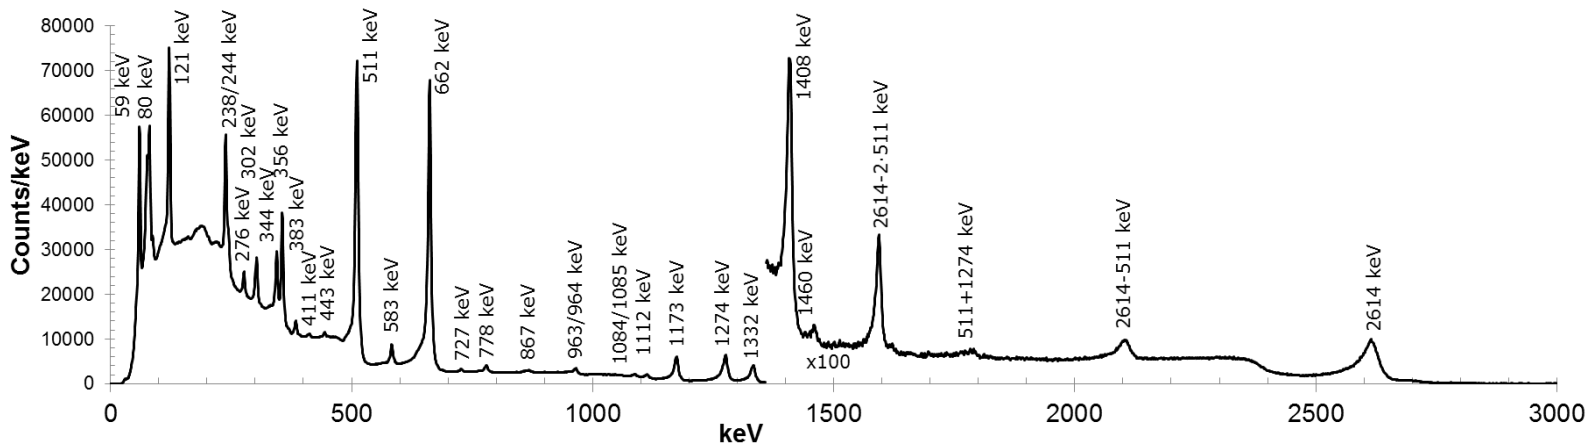

A400 Specifications

Dimensions:	12.0 in x 3.0 in x 3.75 in (30.5 cm x 7.6 cm x 9.5 cm)
Weight:	2.6 lbs (1.2 kg)
Battery Life:	>8 hours
Power Supply:	100-240 V, 47-63 Hz
Operating Temperature:	-20° C to 50° C (-4° F to 122° F)
Operating Humidity:	Up to 93% at 35° C (95° F)
Ingress Protection:	IP65
Energy Resolution at 25° C (77° F):	≤1.1% FWHM at 662 keV (gamma; coincident interactions combined) ≤0.9% FWHM at 662 keV (gamma; coincident interactions separated)
Sensitivity:	Detects 10-μCi ¹³⁷ Cs at 1 m (~3 μR/hr) in < 22 s (in natural backgrd) Localize 10-μCi ¹³⁷ Cs point source at 1 m (~3 μR/hr) in < 90 s to ± 3°
Energy Range:	50 keV to 3 MeV (spectroscopy) 250 keV to 3 MeV (directionality)
Gamma-Ray Detector:	>19 cm ³ CZT (CdZnTe)
Count-Rate Limit:	1 rem/hr (10 mSv/hr) bare- ¹³⁷ Cs equivalent for spectroscopy
Startup Time:	<60 s
Isotope Library:	Selectable from manufacturer-provisioned master library
User Interface:	3.5" embedded screen with button control Also viewable on any internet browser
Views:	Spectrum, identifications, dose, count-rate history, status information
Communication:	WiFi, Bluetooth, USB-C, RJ45 Ethernet through adapter
Data Storage:	32 GB internal (>1 million measurements)
Data Stored:	ANSI N42.42 xml file
Certifications:	ANSI N42.34 and DND0 TCS test reports available by request UL (predicted)
Warranty:	2 years (includes annual recalibration and software updates)
Includes:	Power cables Watertight Pelican™ Storage Case with custom foam

About H3D, Inc.

H3D® is commercializing CZT-based 3D radiation-imaging technologies. Our team has over 100 years of combined experience in Compton Imaging, CZT readout, and system integration. We are employee-owned, market-driven, and committed to providing our customers with the highest performance and most user-friendly instruments possible.

Any options can be combined, except as noted.

High-Resolution Option (A400+)

Improved energy resolution of
≤0.8% FWHM at 662 keV
(coincident interactions combined)
and ≤0.65% FWHM at 662 keV
(coincident interactions separated)

Neutron-Detector Option (A401)

Add 16 cm² Micro-Structured Neutron Detector (MSND)
Neutron Sensitivity: 4.8 cps/nv (thermal)

Lower Efficiency Options

A200

Weight: 2.6 lbs (1.2 kg)
Sensitivity: Detection and localization times increased by 2x
Crystal Volume: >9 cm³ CZT

A100

Weight: 2.5 lbs (1.1 kg)
Sensitivity: Detection and localization times increased by 4x
Crystal Volume: >4.5 cm³ CZT



H3D®, Inc. • 812 Avis Drive • Ann Arbor, MI 48108 • USA

Tel +1 734-661-6416 • sales@h3dgamma.com • www.h3dgamma.com

© 2017-2024 H3D, Inc. All Rights Reserved. A400 and related systems patent protected by:

U.S. Pat No. 7,411,197 & U.S. Pat No. 7,692,155 under license from the University of Michigan, and U.S. Pat No. 10,032,264 & U.S. Pat No. D867,169.

Specifications, descriptions and images contained in this document were in effect at time of publication. H3D, Inc. reserves the right to change specifications or discontinue products without notice or obligation. All names, logos, and products herein are trademarks of their respective companies.